Illustrated Parts List

The Illustrated Part List (IPL) contains the illustrations and the parts lists for the different assemblies in the printer. The parts lists give the part numbers, description and quantity of all the items and the modules in the printer. You can order the items and the modules for which the part numbers are given.

How to Read the IPL

This section describes how the higher assemblies are broken down to their related sub assemblies and other separate parts.

Illustrations

Table 10-1 shows the symbols used to indicate the different levels of main assemblies in a printer, and the sub assemblies under the main assembly.

Rev AB How to Read the IPL 10-1

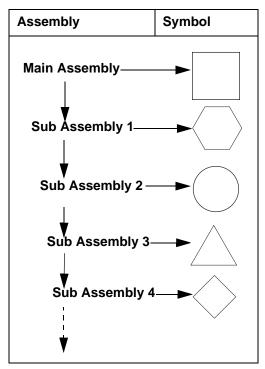


Table 10-1: Symbols Representation - Assemblies

► Indicates further explosion.

Alphabets

- An alphabet is assigned to the main assemblies of a printer and each sub assembly under the main assembly. See Figure 10-1 on page 10-3.
 - For example: If A, B, C and D identify the main assemblies of a printer, then the alphabets E, F, and so on identify sub assemblies below each main assembly in a sequence.
- The alphabets assigned to main assemblies are used only for one time.
- The alphabets "I" and "O" are not used because they look like the numbers 1 and 0.

10-2 How to Read the IPL Rev AB

Numbers

A natural number (1,2,3.....) is assigned to the stand alone parts (in ascending order) through out the breakdown of main assemblies. See Figure 10-1.

Note: The numbers assigned to main assemblies can be used only for one time.

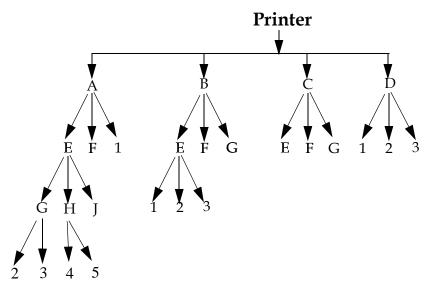


Figure 10-1: Graphical Representation of the Different Subassemblies and Parts

Rev AB How to Read the IPL 10-3

Tables

Figure 10-2 describes the styles used to show the explosion of the main assemblies in parts lists.

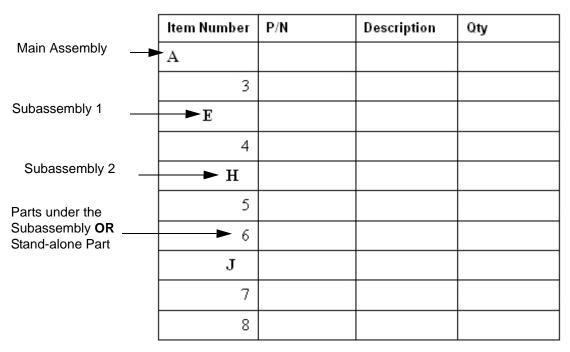


Figure 10-2: Representation of Subassemblies in the Table

Notes

Notes provide useful information. Some examples for note are as follows:

Note: To order this item, use part number of item 9 in this table.

Note: This screw is a part of Core Module.

Note: This item can be ordered separately.

10-4 How to Read the IPL Rev AB

Videojet 1560 Printer

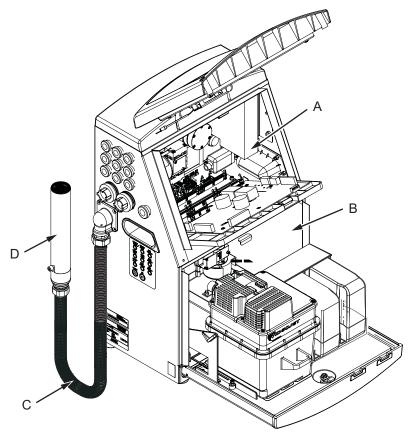


Figure 10-3: Main Parts of the Printer

Table 10-2 shows the subassemblies of the printer.

| Item | Descriptions |
|------|-------------------------|
| Α | Electronics Compartment |
| В | Ink Compartment |
| С | Umbilical |
| D | Printhead |

Table 10-2: Videojet 1560 Printer Assemblies

Rev AB Videojet 1560 Printer 10-5

Electronics Compartment

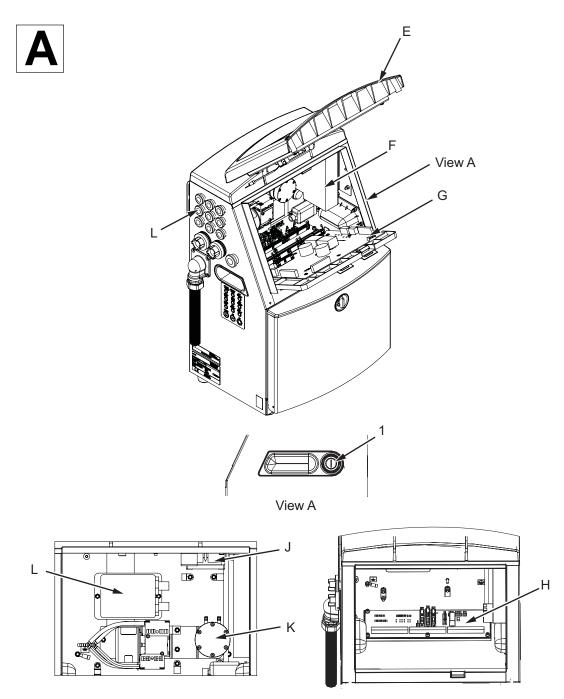


Figure 10-4: Electronics Compartment

Power Switch




Figure 10-5: Power Switch

Electronics Door Assembly



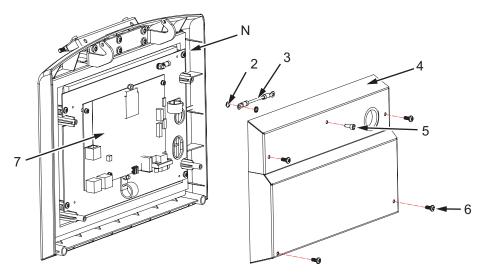


Figure 10-6: Electronics Door Assembly

Retrofit Touch Screen



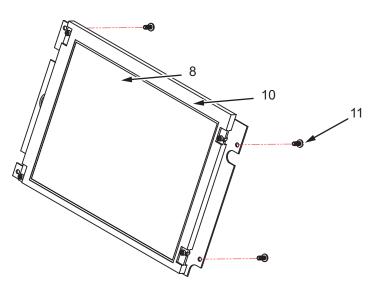


Figure 10-7: LCD and FIB

Display Door

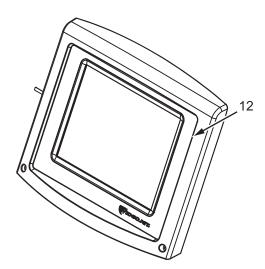


Figure 10-8: Display Door

Power Supply Unit Assembly

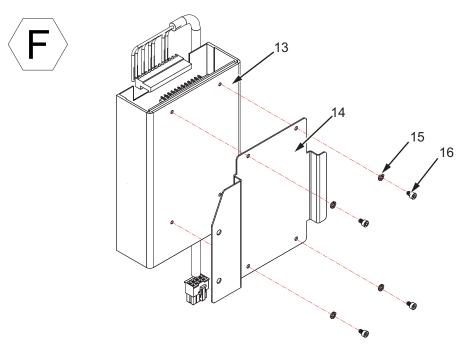


Figure 10-9: Power Supply Unit Assembly

Control System Board (CSB) with Back Plate

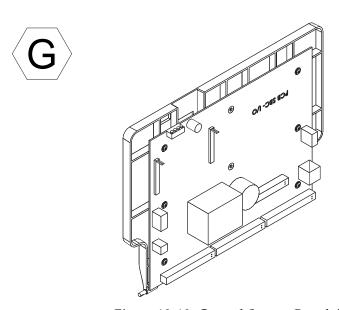


Figure 10-10: Control System Board Assembly (CSB 4)

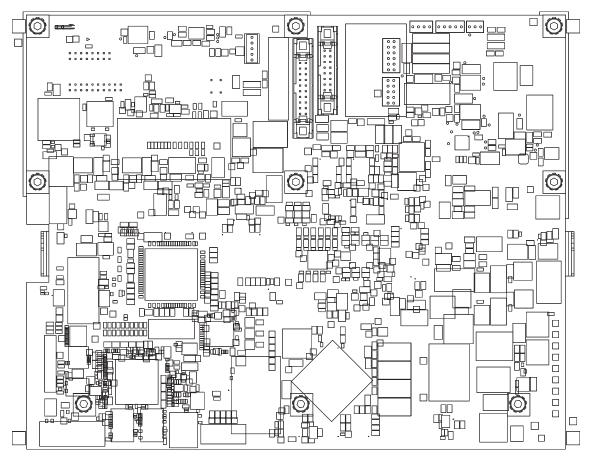


Figure 10-11: Control System Board (CSB 5/PIB)

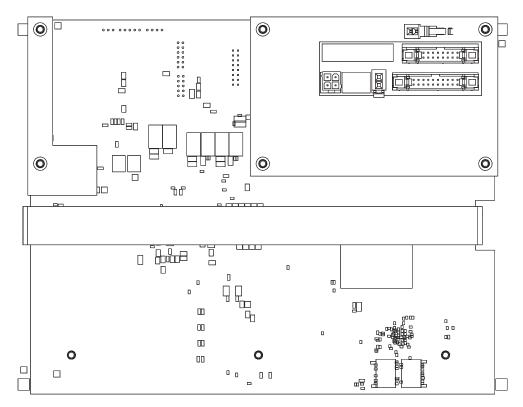


Figure 10-12: Control System Board (CSB 5/PIB) - Rear View

Printer Interface Board Assembly (PIB) - For Separate PIB Only

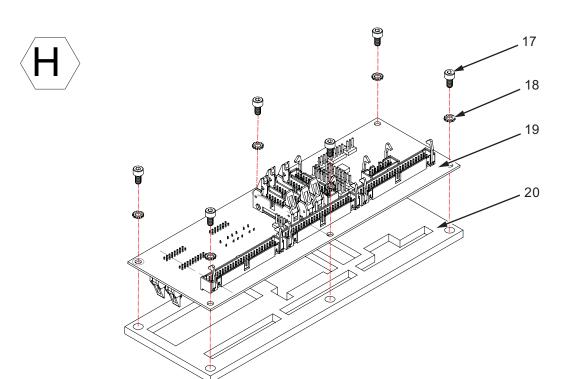


Figure 10-13: Printer Interface Board Assembly

Electronics Fan Assembly

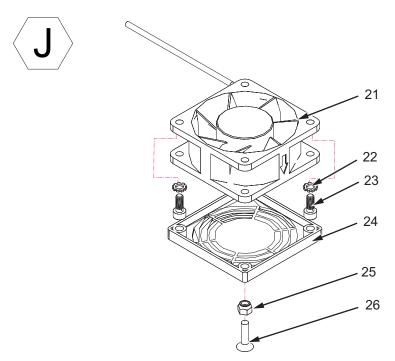


Figure 10-14: Electronics Fan Assembly

Air Pump Assembly



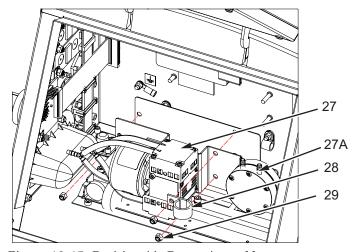


Figure 10-15: Positive Air Pump Assembly

EHT/HV Module

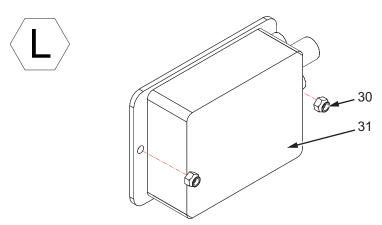


Figure 10-16: EHT/HV Module

Connector Panel



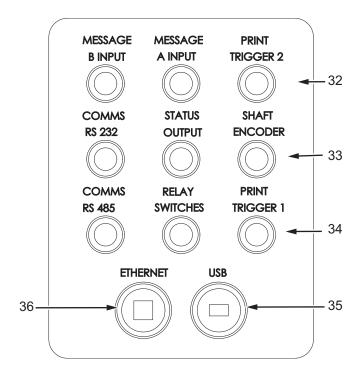


Figure 10-17: Connector Panel

PCB 2 Assembly

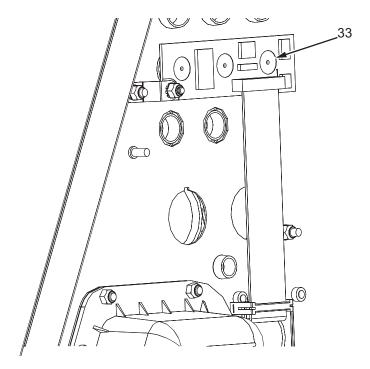


Figure 10-18: PCB 2 Assembly

PCB 1 Assembly

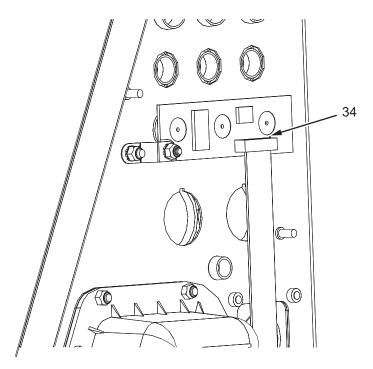


Figure 10-19: PCB 1 Assembly

| Item Number | P/N | Description | Qty |
|-------------|----------|------------------------------|-----|
| Α | | Electronics Compartment | |
| 1 | SP219041 | Power Switch | 1 |
| Е | | Electronics Door Assembly | |
| N | 395795 | RETROFIT, TOUCH SCREEN | |
| 2 | | M4 ET Washer | 2 |
| 3 | | Display Ground Wire | 1 |
| 4 | | Display Rear Cover | 1 |
| 5 | | M4 x 10 Cap-head Screw | 1 |
| 6 | | K40 x 10 Pan-head Torx Screw | 4 |
| 7 | 395791 | CLARITY PCB (FIB) Spare | |
| 8 | 395790 | Touch Screen (LCD) Spare | |

Table 3: Electronics Compartment

| Item Number | P/N | Description | Qty |
|-------------|----------|--|-----|
| 9* | 395893 | SD CARD Spare | |
| 10 | | LCD and FIB Assembly | 1 |
| 11 | | Screw | 4 |
| 12 | 395889 | Display Door Surround Spare | |
| F | 395897 | Power Supply Unit (PSU) Assembly with Mount | |
| 13 | | PSU | 1 |
| 14 | | PSU Mounting Plate | 1 |
| 15 | | M3 ET Washer | 4 |
| 16 | | M3 x 5 Cap-head Screw | 4 |
| G | 397554 | Control System Board (CSB) with Back Plate | 1 |
| | SP392434 | CSB/PIB Combined | 1 |
| Н | 399473 | Printer Interface Board (PIB) Assembly (For Separate PIB Only) | |
| 17 | | M4 x 8 Cap-head Screw | 6 |
| 18 | | M4 ET Washer | 6 |
| 19 | | PIB | 1 |
| 20 | | PIB Gasket | 1 |
| J | 399079 | Electronics Fan Assembly | |
| 21 | | Fan, 60 mm | 1 |
| 22 | | M4 ET Washer | 2 |
| 23 | | M4 x 10 Cap-head Screw | 2 |
| 24 | | Finger guard, 60 mm | 1 |
| 25 | | M4 Nyloc Nut | 2 |
| 26 | | M4 x 16 Counter Sunk Screw | 2 |
| K | SP399399 | Double Headed Air Pump Assembly (for single head system | |
| 27A | | Dampener | 1 |

Table 3: Electronics Compartment (Continued)

| Item Number | P/N | Description | Qty |
|-------------|----------|---------------------|-----|
| 28 | | P-Clip | 1 |
| 29 | | M4 Nyloc Nut | 2 |
| L | 399081 | EHT Module Assembly | |
| 30 | | M4 Nyloc Nut | 2 |
| 31 | | EHT Module | 1 |
| М | | Connector Panel | |
| 32 | SP500096 | PCB 3 Assembly | 1 |
| 33 | SP500097 | PCB 2 Assembly | 1 |
| 34 | SP500095 | PCB 1 Assembly | 1 |
| 35 | 395898 | USB A-B BULKHEAD | 1 |
| 36 | 395899 | ETHERNET BULKHEAD | 1 |

Table 3: Electronics Compartment (Continued)

Ink Compartment



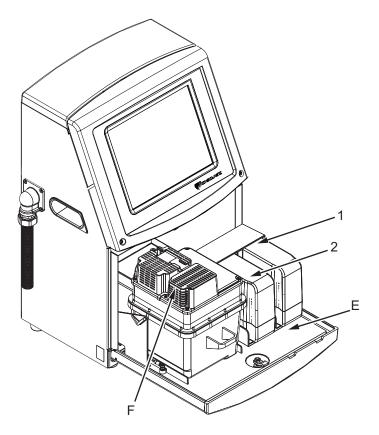


Figure 10-20: Ink System

Ink Cartridge

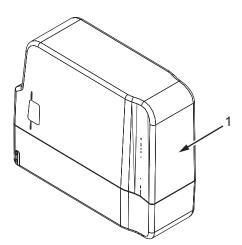


Figure 10-21: Ink Cartridge

Rev AB Ink Compartment 10-19

Make-up Cartridge

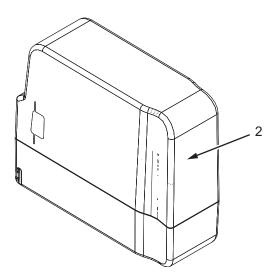


Figure 10-22: Make-up Cartridge



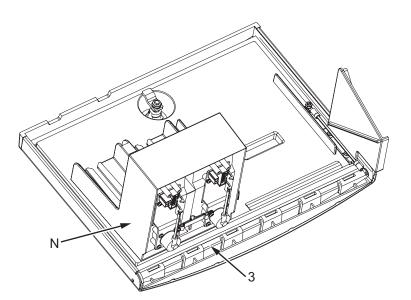


Figure 10-23: Ink Door Assembly

10-20 Ink Compartment Rev AB

Septum Assembly



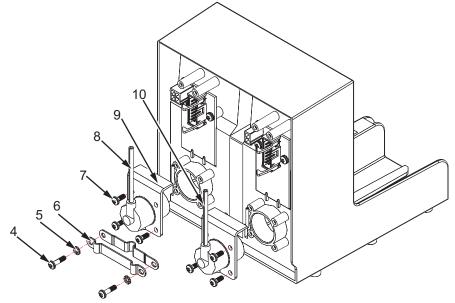


Figure 10-24: Septum Assembly

Rev AB Ink Compartment 10-21

Ink Core Module Assembly


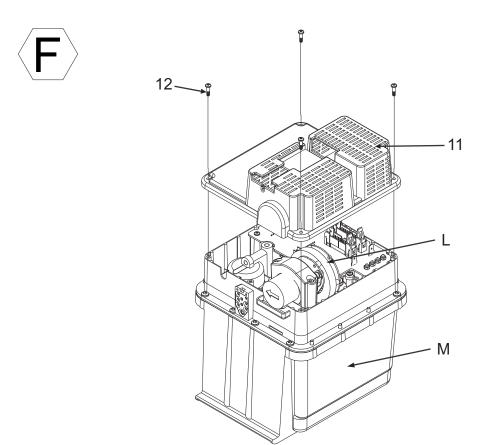


Figure 10-25: Core Module

Ink Core Pump

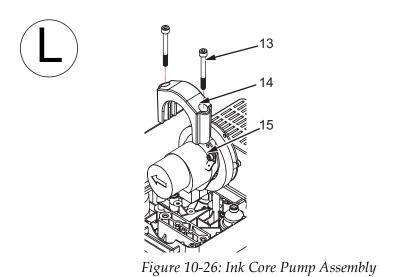

10-22 Ink Compartment Rev AB

Ink Core Without Pump



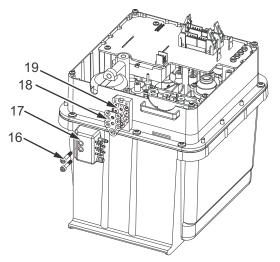


Figure 10-27: Ink Core Module Without Pump

Gutter Pump Assembly



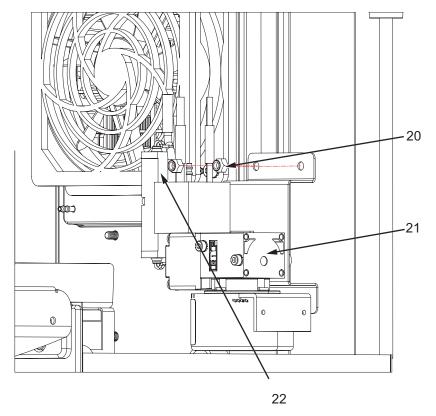


Figure 10-28: Gutter Pump Assembly

Rev AB Ink Compartment 10-23

Ink System Fan

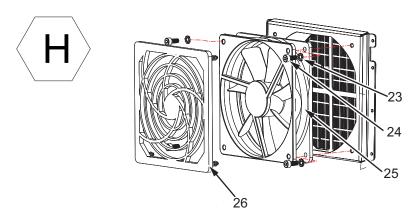


Figure 10-29: Ink System Fan Assembly

Condenser Assembly

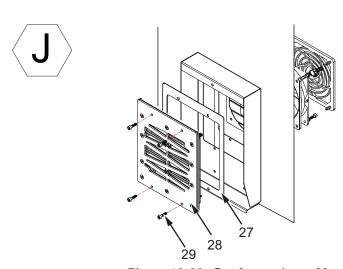


Figure 10-30: Condenser Assembly

10-24 Ink Compartment Rev AB

Ink System Filter Assembly - IP65



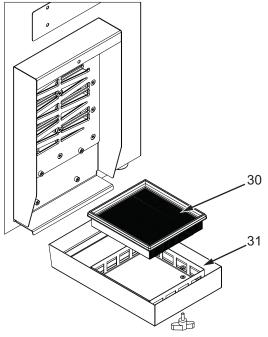


Figure 10-31: Ink System Filter Assembly - IP65

Ink System Filter Assembly - IP55



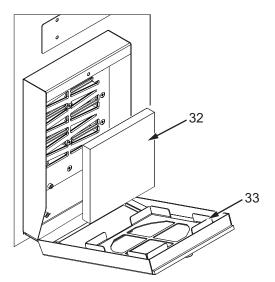


Figure 10-32: Ink System Filter Assembly - IP55

Rev AB Ink Compartment 10-25

Floor Filter - IP65



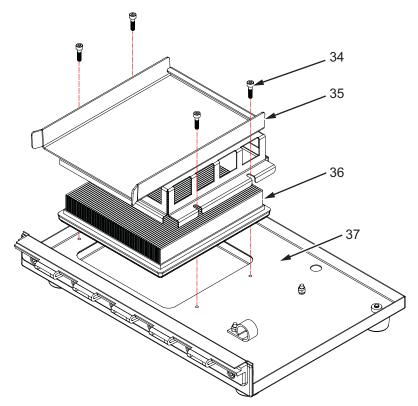


Figure 10-33: Floor Filter - IP65

10-26 Ink Compartment Rev AB

Floor Filter

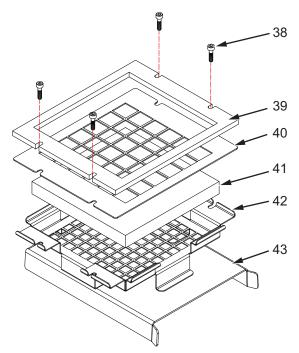


Figure 10-34: Floor Filter - IP55

Cabinet Foot

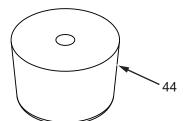


Figure 10-35: Cabinet Foot

Rev AB Ink Compartment 10-27

| Item Number | P/N | Description | Qty |
|-------------|--------------------------------|------------------------------------|-----|
| В | | Ink Compartment | |
| 1 | | Ink Cartridge | 1 |
| 2 | | Make-up Cartridge | 1 |
| Е | 399071 (IP55) 399472 (IP65) | Ink Door Assembly | |
| 3 | | Hinge Pin | 1 |
| N | 399073 | Septum Assembly | |
| 4 | | K30 x 12 Pan-head Torx Screw | 2 |
| 5 | | M3 ET Washer | 2 |
| 6 | | Tube and Ribbon Cable Clamp | 1 |
| 7 | | K30 x 8 Pan-head Torx Screw | 6 |
| 8 | | Black Stripe Tube (Ink System) | 1 |
| 9 | | Septum | 2 |
| 10 | | Green Stripe Tube (Make-up System) | 1 |
| F | 397549 | Ink Core with Pump | |
| 11 | | Ink Core Cover | 1 |
| 12 | | K30 x 12 Pan-head Torx Screw | 2 |
| L | 399076 | Ink Core Pump | |
| 13 | | M4 x 35 Cap-head Screw | 2 |
| 14 | | Saddle Clamp | 1 |
| 15 | | Ink Core Pump | 1 |
| M | 397550 | Ink Core without Pump | |
| 16 | | M3 x 7 Manifold Screw | 2 |
| 17 | | Ink Core Manifold (Male) | 1 |
| 18 | | Ink Core Manifold Gasket | 1 |
| 19 | | Ink Core Manifold (Female) | 1 |

Table 4: Ink Compartment

10-28 Ink Compartment Rev AB

| Item Number | P/N | Description | Qty |
|-------------|----------|----------------------------|-----|
| G | 399171 | Gutter Pump Assembly | |
| 20 | | M4 Nyloc Nut | 2 |
| 21 | | Gutter Pump | 1 |
| 22 | | 3 Way Valve | 1 |
| Н | 399080 | Ink System Fan Assembly | |
| 23 | | M4 ET Washer | 4 |
| 24 | | M4 x 10 Cap-head Screw | 4 |
| 25 | | Fan | 1 |
| 26 | | Fan Guard | 1 |
| J | 399350 | Condenser Assembly | |
| 27 | | Condenser Body Gasket | 1 |
| 28 | | Condenser Assembly | 1 |
| 29 | | M4 x 16 Cap-head Screw | 4 |
| K | | Ink System Filter Assembly | |
| | | IP 65 | |
| 30 | SP234502 | Filter Element | 1 |
| 31 | 395763 | Filter Cover | 1 |
| | | IP 55 | |
| 32 | 234081 | Filter Element | 1 |
| 33 | 395762 | Filter Cover | 1 |
| L | | Floor Filter Assembly | |
| | | IP 65 | |
| 34 | | M4 x 16 Cap-head Screw | 4 |
| 35 | | Ink Core Support | 1 |
| 36 | SP234502 | Filter Element | 1 |
| 37 | | Filter Cover | 1 |
| | | IP 55 | |

Table 4: Ink Compartment (Continued)

Rev AB Ink Compartment 10-29

| Item Number | P/N | Description | Qty |
|-------------|--------|---------------------------|-----|
| 38 | | M4 x 16 Cap-head Screw | 4 |
| 39 | | Floor Filter Cover Gasket | 1 |
| 40 | | Filter Cover | 1 |
| 41 | 234081 | Filter Element | 1 |
| 42 | | Filter holder | 1 |
| 43 | | Ink Core Support | 1 |
| | 392004 | Cabinet Feet Kit | |
| 44 | 234500 | Cabinet Foot | 4 |

Table 4: Ink Compartment (Continued)

10-30 Ink Compartment Rev AB

^{*-} Items are not shown in the figure.

Printhead



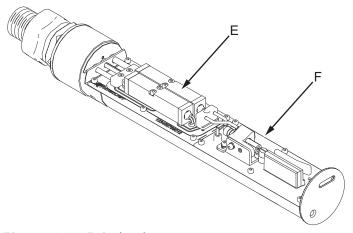


Figure 10-36: Printhead



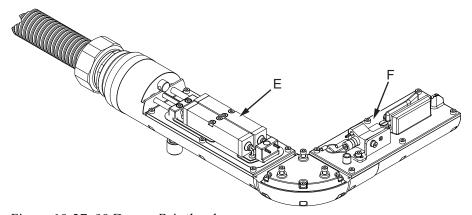


Figure 10-37: 90 Degree Printhead

Rev AB

Printhead Valve Module



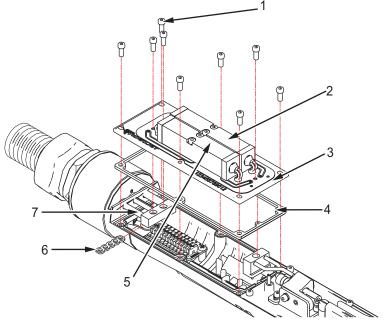


Figure 10-38: Printhead Valve Module



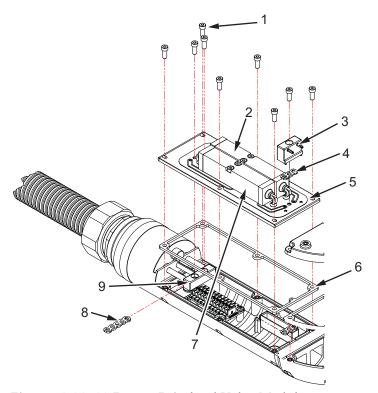


Figure 10-39: 90 Degree Printhead Valve Module

10-32 Printhead Rev AB

Printhead Engine



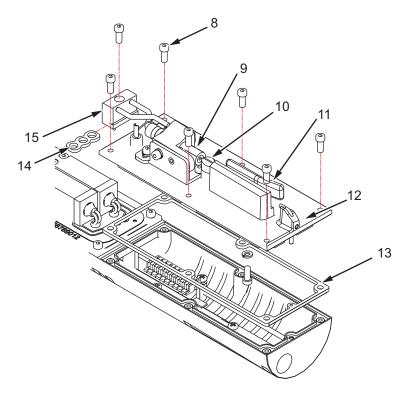


Figure 10-40: Printhead Engine

Rev AB Printhead 10-33



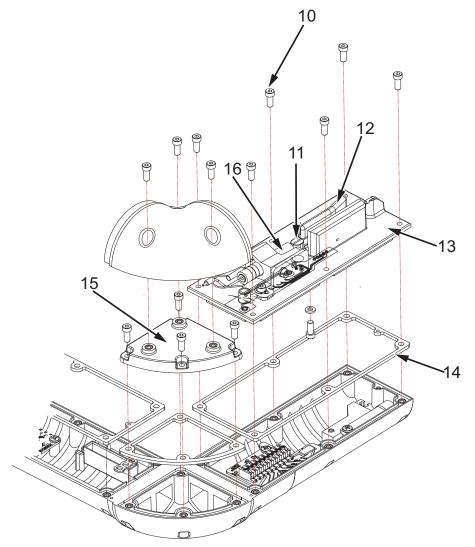


Figure 10-41: 90 Degree Printhead Engine

10-34 Printhead Rev AB

Printhead

Note: Refer to Table 6 on page 36 for information on 90 degrees printhead

| Item Number | P/N | Description | Qty |
|-------------|------------------|---|-----|
| D | | Printhead | |
| Е | 399181 | Printhead Valve Module | |
| 1 | | M2 x 6 Cap-head Screw | 9 |
| 2 | | Gutter Valve | 1 |
| 3 | | Printhead Valve Module Deck | 1 |
| 4 | Refer to Item 16 | Printhead Valve Module Gasket | 1 |
| 5 | | Feed Valve | 1 |
| 6 | Refer to Item 16 | Rear Manifold Gasket | 1 |
| 7 | | 3 Way Manifold Assembly (Rear Tubing Manifold) | 1 |
| F | 399422 | Printhead Engine (60 micron) | |
| | 399180 | Printhead Engine (70 micron) | |
| 8 | | M2 x 6 Cap-head Screw | 8 |
| 9 | | Nozzle Assembly | 1 |
| 10 | | Charge Electrode | 1 |
| 11 | | Deflector Plate | 1 |
| 12 | | Printhead Engine Deck | 1 |
| 13 | Refer to Item 16 | Printhead Engine Gasket | 1 |
| 14 | Refer to Item 16 | Front Tubing Manifold Gasket | 1 |
| 15 | | 2 Way Manifold Assembly (Front Tubing Manifold) | 1 |
| 16* | 399336 | Printhead Gasket Kit | |
| | | Gasket, Printhead | 10 |
| | | Gasket, 3 way Manifold | 10 |

Table 5: Printhead Assembly

Rev AB Printhead 10-35

| Item Number | P/N | Description | Qty |
|-------------|-----|----------------------------|-----|
| | | Gasket, 2 way Manifold | 10 |
| | | Connection Manifold Gasket | 10 |
| | | 4.47 x 1.78 O-ring | 10 |

Table 5: Printhead Assembly (Continued)

90 Degree Printhead

| Item Number | P/N | Description | Qty |
|-------------|------------------|---|-----|
| D | | Printhead | |
| E | 399181 | Printhead Valve Module | |
| 1 | | M2 x 6 Cap-head Screw | 9 |
| 2 | | Gutter Valve | 1 |
| 3 | | 2 Way Manifold Assembly (Front Tubing Manifold) | 1 |
| 4 | Refer to Item 17 | Front Tubing Manifold Gasket | 1 |
| 5 | | Printhead Valve Module Deck | 1 |
| 6 | Refer to Item 17 | Printhead Valve Module Gasket | 1 |
| 7 | | Feed Valve | 1 |
| 8 | Refer to Item 17 | Rear Manifold Gasket | 1 |
| 9 | | 3 Way Manifold Assembly (Rear Tubing Manifold) | 1 |
| F | SP399621 | 90 Degree Printhead Engine (60 micron) | |
| | SP399622 | 90 Degree Printhead Engine (70 micron) | |
| 10 | | M2 x 6 Cap-head Screw | 14 |
| 11 | | Charge Electrode | 1 |
| 12 | | Deflector Plate | 1 |
| 13 | | Printhead Engine Deck | 1 |
| 14 | Refer to Item 17 | Printhead Engine Gasket | 1 |

Table 6: 90 Degree Printhead Assembly

10-36 Printhead Rev AB

| Item Number | P/N | Description | Qty |
|-------------|--------|------------------------------------|-----|
| 15 | | Corner Chassis Cap-Insert Assembly | 1 |
| 16 | | Nozzle Assembly | 1 |
| 17* | 399660 | 90 Degree Printhead Gasket Kit | |
| | | Gasket, Printhead | 10 |
| | | Gasket, 3 way Manifold | 10 |
| | | Gasket, 2 way Manifold | 10 |
| | | Connection Manifold Gasket | 10 |
| | | 4.47 x 1.78 O-ring | 10 |
| | | Gasket, Corner | 10 |

Table 6: 90 Degree Printhead Assembly (Continued)

Rev AB Printhead 10-37

^{*-} Items are not shown in the figure

Cables

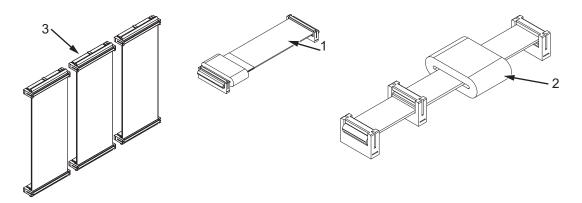


Figure 10-42: Cables

| Item Number | P/N | Description | Qty |
|-------------|----------|---|-----|
| | 399237 | Ribbon Cable Spare Kit | |
| 1 | | Ribbon Cable Assembly Display | 1 |
| 2 | SP399052 | Ribbon Cable Assembly Smart Chip and Pump 14 Way | 1 |
| 3 | | 50 Way Ribbon Cables | 3 |
| 4* | 395792 | Touch Screen Cable Kit Spare | 1 |

Table 7: Cables

10-38 Cables Rev AB

^{*-} Items are not shown in the figure